

3 Cable plug&Unplug

①

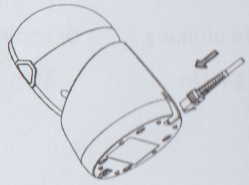


①Plug as picture above

②

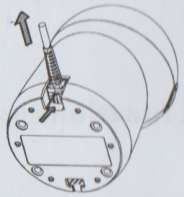

②Press the buckle click, then pull out the cable

4 Methods

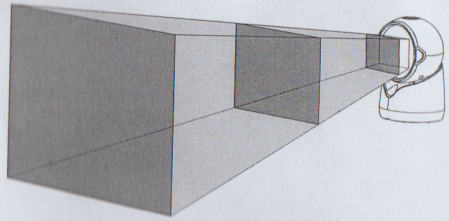

Scanning methods:

1. Make sure all connection lines are securely connected

2.Move the bar code toward the scan window.

3. Display the bar code anywhere within the effective area of the scanner.

4. After the decoding is successful, the scanner will sing once and the LED will flash once.

5 Problems and Solutions

Problem	Possible Solutions
Don't work	Disconnect the power adapter and reconnect
Bar code is decoded, but not transmitted to the host.	Check the parameters(Waves)of the scanner and application
Unable to decode bar code	1. Please refer to this book if the code reading method is wrong Correct code reading in the manual 2. Whether the bar code is set to be readable 3. Whether the bar code is damaged, if the bar code is damaged Worse than the scanner itself Reading ability, barcode will not be recognized to read

Decode Settings

Setting Step

1 Scan the bar code of "Enter setting"

Enter Setting

2 Scan the function bar codes

3 Scan the bar code of "Exit and Save"

Exit and Save

① Suffix Values

None

0x0D 0x0A (CR LF)

*0x0D (CR)

TAB

② Keyboard Language

*US

German

French

Italian

Czech Republic

Spanish

Portuguese

Japanese

③ Symbologies

Enable all symbologies

Only 1D barcode is enabled

Only 2D barcode is enabled