优库®
YK&SCAN

USER GUIDE

This User Guide Applies to HS-26

About This User Guide

Pls read all the content of the user guide carefully to use the products safely and effectively. You are advised of keeping it properly for your using reference.

Disclaimer

Please do not dismantle the product or tear up the seal on it, otherwise we won't provide warranty or replacement service.

The pictures in this user guide are for reference only. If there are any pictures which not match the actual product, please take actual products as the standard. Updated information is subject to change without notice.

All information contained in this guide are protected by copyright, and our company reserves all rights. All or part of this guide is prohibited to excerpt, copy, bundle other products, or sell without the written permission from us.

2017 Guangzhou Yoko Electron Co., Ltd all rights reserved.

Service Information

For technical assistant or product service and repair, please go to www.chinayoko.com

Version Record

Version number	Version description	Version date
Barcode Scanner V2.13 Built Time:NOV 7 2018 11:43:22	Initial version	2019-3-21

Catalogue

1、Product Introduction 8

1.1 Main feature 8

1.2 Unpack your device 8

1.3 Product display 9

1.3.1 External view 9

1.3.2 Dimention（mm） 9

1.4 Communication port(Not support RS232 interface for now) 9

1.5 Start-up, shutdown, standby and restart 10

1.6 Maintenance 10

1.7 Reading skills 10

2、Barcode Menu 11

2.1 Mark Setting 11

2.2 Setting barcodes 11

2.2.1 Enable/Disable Parameter Bar Code Scanning 11

2.2.2 Restore Factory Defaults 11

2.2.3 Scanner Firmware Version 12

2.2.4 Read user defaults 12

2.2.5 Interface 12

2.2.6 Serial port setting 13

2.2.7 Scanning Mode 14

2.2.8 Screen Read Mode 15

2.2.9 center mode 15

2.2.10 Illumination 15

2.2.11 Aiming light control 15

2.2.12 character escape 16

2.2.13 GS Control character substitution(Enable character escape first) 16

2.2.14 Prefix 17

2.2.15 Suffix 17

2.2.16 Chinese output mode 18

2.2.17 Invoice (For China) 18

2.2.18 Invoice type (for China) 18

2.2.19 Inverse code option 18

2.2.20 Virtual keyboard 19

2.2.21 Operation system choice under virtual keyboard 19

2.3 Beeper and LED notifications 19

2.3.1 Beeper Volume 19

2.3.2 Beeper-Startup 20

2.3.3 Beeper-Good Read 20

2.3.4 Beeper Tone-Good Read 20

2.3.5 Beeper Duration-Good Read 20

2.3.6 Beeper-Error 21

2.3.7 LED 21

2.4 Same Barcode Scanning Interval setting 21

2.5 USB keyboard update speed setting 22

2.6 Enter and Line Feed Character Output （USB keyboard） 22

2.7 USB keyboard text-transform 23

2.8 Keyboard layout setting 23

2.9 Symbologies 25

2.9.1 enable/disable all symbologies 25

2.9.2 Codabar 25

2.9.3 Codabar start/ending character setting 26

2.9.4 Codabar limitation of length 26

2.9.5 Code 39 26

2.9.6 Code 39 check bit 26

2.9.7 Code 39 Full ASCII 27

2.9.8 Code 39 limitation of length 27

2.9.9 Code 32 （Code 39 needs to be enabled） 27

2.9.10 Interleaved 2 of 5 （ITF5） 27

2.9.11 Interleaved 2 of 5 （ITF5）check bit 27

2.9.12 Interleaved 2 of 5 （ITF5）length setting 28

2.9.13 Interleaved 2 of 5 Limitation of length 29

2.9.14 Industrial 2 of 5（4-24 digits） 29

2.9.15 Industrial 2 of 5 Limitation of length 29

2.9.16 Matrix 2 of 5（4-24） 29

2.9.17 Matrix 2 of 5 Limitation of length 30

2.9.18 Code 93 30

2.9.19 Code 93 Limitation of length 30

2.9.20 Code 11 30
2.9.21 Code 11 check bit output 30
2.9.22 Code 11 check bit option 31
2.9.23 Code 11 Limitation of length 31
2.9.24 Code 128 31
2.9.25 Code 128 Limitation of length 32
2.9.26 ISBT-128 32
2.9.27 GS1-128 32
2.9.28 UPC-A 32
2.9.29 UPC-A check bit 32
2.9.30 UPC-A to EAN-13 32
2.9.31 UPC-E 33
2.9.32 UPC-E check bit 33
2.9.33 UPC-E to UPC-A 33
2.9.34 EAN/JAN-8 33
2.9.35 EAN/JAN-13 33
2.9.36 UPC/EAN/JAN extra-code 34
2.9.37 EAN13 to ISBN 34
2.9.38 EAN13 to ISSN 34
2.9.39 GS1 DataBar（RSS14） 34
2.9.40 GS1 DataBar Limited 35
2.9.41 GS1 DataBar Expanded 35

2.9.42 PDF417 35
2.9.43 Micro PDF417 35
2.9.44 QR Code 36
2.9.45 Micro QR 36
2.9.46 Data Matrix 36
2.9.47 Aztec Code 36
2.10 User-defined prefix setting 36
2.11 User-defined suffix setting 37
2.12 Code ID 37
2.13 AIM ID setting 38
APPENDIX 38
Appendix 1 data and editing code 38
Appendix 2 code type ID table 41
Appendix 3 eyeball character ASCII table 42
Appendix 4 operational character（USB keyboard） 43
Appendix 5 operational character（serial port and USB-VCOM） 44
configuration instruction and example 45

1、Product Introduction

This user guide applies to HS-26, which identify 1D&2D barcodes by 2D image scanning pattern, and apply the complete set of patent technology developed by Guangzhou YOKO Electron Co., Ltd. The scanners above are of strong identification capability, and support automatic continuous scanning mode with fast and flexible scanning speed.

In this chapter, we will introduce the instruction of scanner with pictures, please compare to the scanner you bought when reading this user guide, which is good for your understanding. This chapter applies to regular users, maintenance personnel, and software developers.

1.1 Main feature

* Complete independent research and development, possessing the complete set of patent, plug and play without the need to install driver.

* Wide voltage design to avoid the data can't be transmitted due to voltage fluctuation.

* 32-bit master chip equipped with patented software, the scanner can smoothly decode reflective, wrinkled, blurred, and colorful barcode, and can also normally scan in light and dark environment.

* Adopt all tantalum capacitors and anti-oxidation optical technology, avoiding the problem of performance declining after long-term using.

1.2 Unpack your device


After you open the shipping carton containing the product, take the following steps:

- Take the accessories for scanner out from package.
- Check with the packing list to see if everything is complete and in good condition. If there are any damaged or missing components, please keep the original package and contact your supplier for after-sales service.


1.3 Product display


1.3.1 External view



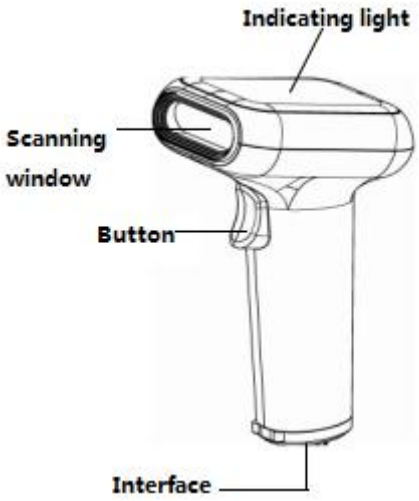


1.3.2 Dimention（mm）

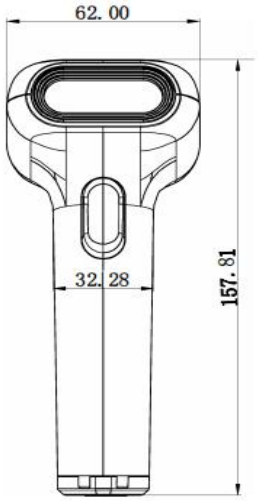

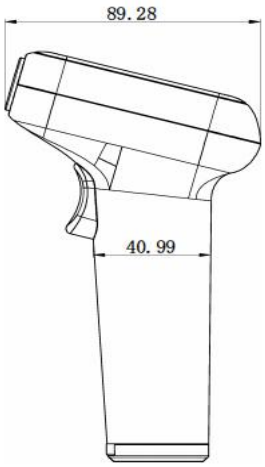

1.4 Communication port(Not support RS232 interface for now)

The scanner must be connected to a host to operate. Host can be a PC, POS machine, intelligent terminal with USB or RS-232 interface.

USB	USB interface on host	
RS-232	RS-232 interface on host	

1.5 Start-up, shutdown, standby and restart

Start-up：Connect host computer with scanner, which will automatically start-up and in working state.

Shutdown：Remove the data cable which is connected with scanner; remove the USB which is connected with host computer; remove the power adapter which is inserted into RS-232 serial port.

Standby：Scanner with automatic sleep standby function, if 30 minutes without work it will be in standby mode, but it will automatically start-up when barcode approach.

Restart：If the scanner crashes or doesn't respond, please switch it off and restart.

1.6 Maintenance

* The window must be kept clean, the supplier do not bear the guarantee responsibility due to the improper maintenance.

* Avoid the window being wear and tear or scratched by hard object

* Use the hairbrush to remove the stain on the window

* Clean the window with a soft cloth, such as lens cleaning cloth

* Spraying liquid onto the window is prohibited.


* Prohibit any cleaning solvents, except for the cleaning water.

1.7 Reading skills

If the barcode is small, it should be closer to the scanning window; if the barcode is large, it should be far away from the scanning window a little more, thus easier to be read correctly.

If the barcode is highly reflective (for example, the coated surface), you may need to tilt the barcode at an angle to successfully scan it.

Barcode scanning example：

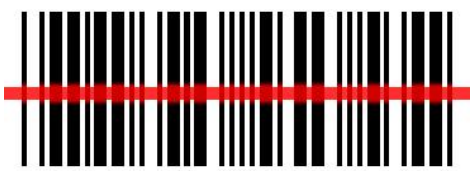


2、Barcode Menu

This model of laser desktop barcode scanner is designed to change settings by reading some special barcode, which we will give you a detailed introduction and show you all the barcodes for the corresponding setting in this section.

The greatest advantage of this setting method is direct, intelligible and user friendly.

2.1 Mark Setting

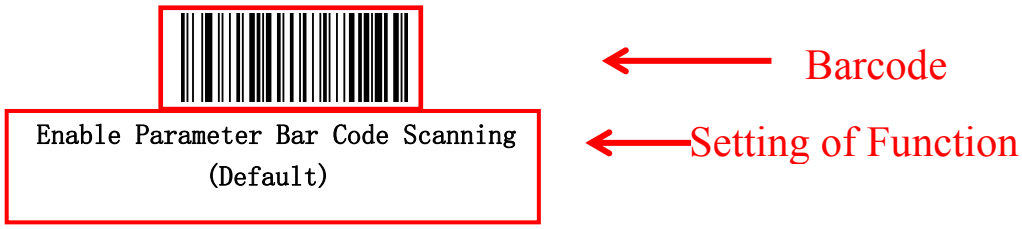

2.2 Setting barcodes

2.2.1 Enable/Disable Parameter Bar Code Scanning

When the configuration code is turn on, All configuration codes available;

When the configuration code is turn off, you need setting it.



Enable Parameter Bar Code Scanning (Default)



Disable Parameter Bar Code Scanning

2.2.2 Restore Factory Defaults



Restore Factory Defaults

2.2.3 Scanner Firmware Version

Firmware Version

2.2.4 Read user defaults

Save the current menu settings as user-defined menu settings.

Save user defaults

You can restore the menu settings for the user-defined menu settings.

Restore user defaults

2.2.5 Interface

This desktop scanner support USBKB、USB to serial port、serial port interface。
You can set USB PC KB、USB MAC KB interface by scanning below barcode。

USB KB（default）

USB MAC KB

You can set serial port interface by scanning below barcode。

Serial port

You can set USB to serial port interface by scanning below barcode. (Need drive, please contact the sales)



USB to serial port

2.2.6 Serial port setting

2.2.6.1 Baud rate setting



Baud Rate 4800



Baud Rate 9600（default）



Baud Rate 38400



Baud Rate 19200



Baud Rate 57600



Baud Rate 115200

2.2.6.1 Serial data bit, stop bit, check bit configuration



7data bits，1stop bits，no check bit



7data bits，1stop bits，even check bit



7data bits，1stop bits，odd check bit



7data bits，2stop bits，no check bit



7data bits，2stop bits，even check bit



7data bits，2stop bits，odd check bit



8data bits，1stop bits，no check bit（default）



8data bits，1stop bits，even check bit



8data bits，1stop bits，odd check bit



8data bits，2stop bits，no check bit



8data bits，2stop bits，even check bit



8data bits，2stop bits，odd check bit

2.2.7 Scanning Mode



Manual scanning model(Default)）



Enable Automatic Recognition Mode

2.2.8 Screen Read Mode

When you turn on this mode, Scanners can be decoding the codes on phone or computer. However, turn on this code will be cause lower speed when scanning printing codes. The default is turn off.

Disable Screen Read Mode (Default)

Enable Screen Read Mode

2.2.9 center mode

When enable center mode, the scanner only read the barcode at the center of the scanning light. Default to disable

Disable center mode（default）

Enable enter mode

2.2.10 Illumination

Normal mode

LED always off

LED always on

2.2.11 Aiming light control

Normal mode

Aiming light always off

Aiming light always on

2.2.12 character escape

Enable character escape

Disable character escape（default）

2.2.13 GS Control character substitution(Enable character escape first)

Not replaced

The output character "Ç" must Enable virtual keyboard first

Replace with Ç

Replace with |

Replace with ^]

Replace with]

Replace with <GS>

2.2.14 Prefix

No Prefix

Prefix as STX

2.2.15 Suffix

No Suffix

Add Enter


Add Tab


Add Enter+Tab


Add ETX

2.2.16 Chinese output mode


English output（default）


Chinese output（TXT/excel）


Chinese output（Word）

2.2.17 Invoice (For China)


Disable invoice code（default）


Enable invoice code

In order to make sure the invoice output correctly, when you use invoice function please set Chinese output to “Chinese output(TXT/excel)”。

2.2.18 Invoice type (for China)


Special invoice（default）


plain invoice

2.2.19 Inverse code option

（Only 1D/DataMatrix/Aztec）



Only decode normal code（default）



Only decode inverse code



Decode both normal code and inverse code

2.2.20 Virtual keyboard



Disable virtual keyboard（default）



Enable virtual keyboard

2.2.21 Operation system choice under virtual keyboard



WINDOWS（default）



MAC OS



LINUX

2.3 Beeper and LED notifications

2.3.1 Beeper Volume

Volume low

Volume high（default）

2.3.2 Beeper-Startup

Disable

Enable（default）

2.3.3 Beeper-Good Read

Enable Beep After Good Read

Disable Beep After Good Read（default）

2.3.4 Beeper Tone-Good Read

Low Tone

Medium Tone（default）

High Tone

2.3.5 Beeper Duration-Good Read

Long Duration（default）

Short Duration

2.3.6 Beeper-Error

You will hear 4 continue alarm sounds when data upload failure, one single alarm sound means scan indistinguishableness barcode.

Alarm sound low pitch（default）

Alarm sound middle pitch

Alarm sound high pitch

2.3.7 LED

Good-read LED off

Good-read LED on（default）

2.4 Same Barcode Scanning Interval setting

By default, the interval time between first scanning and second scanning for same barcode is 750ms. To avoid being repeatedly with a barcode, you can set the scan interval.

300ms

500ms

750ms（default）

1s

2s

2.5 USB keyboard update speed setting

There barcode is used to set the update speed when scanner is in USB keyboard pattern. If the performance of your PC is lower, we suggest you choose slow update speed to make sure the scanner update the right data.

Slow update speed（default）

Middle update speed

Fast update speed

2.6 Enter and Line Feed Character Output （USB keyboard）

Only 0A(LF) line feed

Only 0D(CR)line feed（default）

Both 0A(LR) and 0D(CR) line feed

2.7 USB keyboard text-transform

Normal output（default）

Case reversal

all Caps

lower case

2.8 Keyboard layout setting

English (United States)

French (France)

Italian (Italy)

Italian 142 (Italy)

German (Germany)

Spanish (Spain)

Spanish (Latin America)

Greek (MS)

Finnish

Japanese

Russian (MS)

Russian (typewriter)

Arabic (101)

Irish

Polish (214)

Polish (Programmers)

Dutch (Netherlands)

Czech (QWERTZ)

Portuguese (Portugal)

Portuguese (Brazil)

Swedish (Sweden)

Turkish Q

Turkish F

Greek (MS)

French (Belgium)

2.9 Symbologies

2.9.1 enable/disable all symbologies

Enable all barcode might slow down scanner decode speed. We suggest enable the barcode you need based on your scene. Enable all barcode is default

Enable all symbologies

Disable all symbologies

2.9.2 Codabar

Enable Codabar

Disable Codabar

2.9.3 Codabar start/ending character setting

Don’t send Codabar start/ending character（default）

Send Codabar start/ending character

2.9.4 Codabar limitation of length

Codabar min length（0~50 bits）

Codabar max（0~50 bits）

2.9.5 Code 39

Enable Code 39

Disable Code 39

2.9.6 Code 39 check bit

Disable Code 39 check（default）

Enable Code 39 check don’t send check bit

Enable Code 39 check send check bit

2.9.7 Code 39 Full ASCII

Enable Full ASCII

Disable Full ASCII（default）

2.9.8 Code 39 limitation of length

Code 39 min length（0~50 bits）

Code 39 max length（0~50 bits）

2.9.9 Code 32 （Code 39 needs to be enabled）

Enable Code 32

Disable Code 32

2.9.10 Interleaved 2 of 5 （ITF5）

Enable ITF25

Disable ITF25

2.9.11 Interleaved 2 of 5 （ITF5）check bit

Disable ITF25 check（default）

Enable ITF25 check don't send check bit

Enable ITF25 check send check bit

2.9.12 Interleaved 2 of 5 （ITF5）length setting

ITF25 No Fixed Length（4-24）（default）

ITF25 Fixed Length of 6 digitals

ITF25 Fixed Length of 8 digitals

ITF25 Fixed Length of 10 Digits

ITF25 Fixed Length of 12 Digits

ITF25 Fixed Length of 14 Digits

ITF25 Fixed Length of 16 Digits

ITF25 Fixed Length of 18 Digits

ITF25 Fixed Length of 20 Digits

ITF25 Fixed Length of 22 Digits

ITF25 Fixed Length of 24 Digits

2.9.13 Interleaved 2 of 5 Limitation of length

Interleaved 2 of 5 min length （0~50 bits）

Interleaved 2 of 5 max length（0~50 bits）

2.9.14 Industrial 2 of 5（4-24 digits）

Enable Industrial 2 of 5

Disable Industrial 2 of 5

2.9.15 Industrial 2 of 5 Limitation of length

Industrial 2 of 5 min length （0~50 bits）

Industrial 2 of 5 max length（0~50 bits）

2.9.16 Matrix 2 of 5（4-24）

Enable Matrix 2 of 5

Disable Matrix 2 of 5

2.9.17 Matrix 2 of 5 Limitation of length

Matrix 2 of 5 min length（0~50 bits）

Matrix 2 of 5 max length（0~50 bits）

2.9.18 Code 93

Enable Code 93

Disable Code 93

2.9.19 Code 93 Limitation of length

Code 93 min length（0~50 bits）

Code 93 max length（0~50 bits）

2.9.20 Code 11

Enable Code 11

Disable Code 11（default）

2.9.21 Code 11 check bit output



Enable Code 11 check bit output



Disable Code 11 check bit output（default）

2.9.22 Code 11 check bit option



Disable Code 11（default）



Code 11 one check bit



Code 11 two check bits

2.9.23 Code 11 Limitation of length



Code 11 min length（0~50 bits）



Code 11 max length（0~50 bits）

2.9.24 Code 128



Enable Code 128



Disable Code 128

2.9.25 Code 128 Limitation of length

Code 128 min length（0~50 bits）

Code 128 max length（0~50 bits）

2.9.26 ISBT-128

Disable ISBT 128

Enable ISBT 128

2.9.27 GS1-128

Enable GS1-128

Disable GS1-128

2.9.28 UPC-A

Enable UPC-A

Disable UPC-A

2.9.29 UPC-A check bit

Send UPC-A check bit（default）

Don’t send UPC-A check bit

2.9.30 UPC-A to EAN-13

Enable UPC-A to EAN-13

Disable UPC-A to EAN-13（default）

2.9.31 UPC-E

Enable UPC-E

Disable UPC-E

2.9.32 UPC-E check bit

Send UPC-E check bit（default）

Don’t send UPC-E check bit

2.9.33 UPC-E to UPC-A

Enable UPC-E to UPC-A

Disable UPC-E to UPC-A（default）

2.9.34 EAN/JAN-8

Enable EAN/JAN-8

Disable EAN/JAN-8

2.9.35 EAN/JAN-13

Enable EAN/JAN-13

Disable EAN/JAN-13

2.9.36 UPC/EAN/JAN extra-code

Ignore UPC/EAN/JAN extra-code（default)

Decode UPC/EAN/JAN extra-code

Adapt UPC/EAN/JAN extra-code

2.9.37 EAN13 to ISBN

Enable EAN13 to ISBN

Disable EAN13 to ISBN（default）

2.9.38 EAN13 to ISSN

Enable EAN13 to ISSN

Disable EAN13 to ISSN（default）

2.9.39 GS1 DataBar（RSS14）

Enable GS1 DataBar

Disable GS1 DataBar

2.9.40 GS1 DataBar Limited

Enable GS1 DataBar Limited

Disable GS1 DataBar Limited

2.9.41 GS1 DataBar Expanded

Enable GS1 DataBar Expanded

Disable GS1 DataBar Expanded

2.9.42 PDF417

Enable PDF417

Disable PDF417

2.9.43 Micro PDF417

Enable Micro PDF417

Disable Micro PDF417

2.9.44 QR Code

Enable QR

Disable QR

2.9.45 Micro QR

Enable Micro QR

Disable Micro QR

2.9.46 Data Matrix

Enable Data Matrix

Disable Data Matrix

2.9.47 Aztec Code

Enable Aztec

Disable Aztec

2.10 User-defined prefix setting

output

Enable user-defined prefix output

Disable user-defined prefix output（default）

edit

clear all user-defined prefix

user-defined prefix

(After scan this code you can set the prefix you want based on the data and barcode in table ID)

2.11 User-defined suffix setting

output

Enable user-defined suffix output

Disable user-defined suffix output（default）

edit

clear all user-defined suffix

User-defined suffix

（After scan this code you can set the prefix you want based on the data and barcode in table ID）

2.12 Code ID

output

Disable CODE ID（default）

Enable CODE ID before barcode

Enable CODE ID after barcode

edit

User-defined CODE ID

（After scan this code you can set the prefix you want based on the data and barcode in table ID）

clear all user-defined CODE ID

2.13 AIM ID setting

Disable AIM ID（default）

Enable AIM ID before barcode

Enable AIM ID after barcode

APPENDIX

Appendix 1 data and editing code

0


1


2


3


4


5


6


7


8


9


A


B


C


D


E


F


Save



Cancel all data read before



Cancel current setting



cancel the data read last time

Appendix 2 code type ID table

Code type	HEX	CODE ID(default)
All codes	99	
Codabar	61	a
Code128	6A	j
Code32	3C	<
Code93	69	i
Code39	62	b
Code11	68	h
EAN		
EAN-13	64	d
EAN-8	44	D
GS1		
GS1 DataBar	79	y
GS1 DataBar Limited	7B	{
GS1 DataBar Expanded	7D	}
GS1-128 (EAN-128)	49	I
2 of 5		
Interleaved 2 of 5	65	e
Matrix 2 of 5	6D	m
Industry 2 of 5	66	f
UPC		
UPC-A	63	c
UPC-E	45	E
Aztec Code	7A	z
DataMatrix	77	w
PDF417	72	r
Micro PDF417	52	R
QR Code	73	s
Micro QR Code	73	s

Appendix 3 eyeball character ASCII table

decimal	hexadecimal	character	decimal	hexadecimal	character	decimal	hexadecimal	character
32	20	<SPACE>	64	40	@	96	60	`
33	21	!	65	41	A	97	61	a
34	22	“	66	42	B	98	62	b
35	23	#	67	43	C	99	63	c
36	24	$	68	44	D	100	64	d
37	25	%	69	45	E	101	65	e
38	26	&	70	46	F	102	66	f
39	27	‘	71	47	G	103	67	g
40	28	(	72	48	H	104	68	h
41	29	)	73	49	I	105	69	i
42	2A	*	74	4A	J	106	6A	j
43	2B	+	75	4B	K	107	6B	k
44	2C	,	76	4C	L	108	6C	l
45	2D	-	77	4D	M	109	6D	m
46	2E	.	78	4E	N	110	6E	n
47	2F	/	79	4F	O	111	6F	o
48	30	0	80	50	P	112	70	p
49	31	1	81	51	Q	113	71	q
50	32	2	82	52	R	114	72	r
51	33	3	83	53	S	115	73	s
52	34	4	84	54	T	116	74	s
53	35	5	85	55	U	117	75	u
54	36	6	86	56	V	118	76	v
55	37	7	87	57	W	119	77	w
56	38	8	88	58	X	120	78	x
57	39	9	89	59	Y	121	79	y
58	3A	:	90	5A	Z	122	7A	z
59	3B	;	91	5B	[	123	7B	{
60	3C	<	92	5C	\	124	7C	|
61	3D	=	93	5D	]	125	7D	}
62	3E	>	94	5E	^	126	7E	~
63	3F	?	95	5F	_			

Appendix 4 operational character（USB keyboard）

decimal	*hexadecimal*	*Corresponding key value（disable CODE ID）*	*Corresponding key value（enable CODE ID）*
0	00	retain	Ctrl+@
1	01	Insert	Ctrl+A
2	02	Home	Ctrl+B
3	03	End	Ctrl+C
4	04	Delete	Ctrl+D
5	05	PageUp	Ctrl+E
6	06	PageDown	Ctrl+F
7	07	ESC	Ctrl+G
8	08	Backspace	Backspace
9	09	Tab	Tab
10	0A	Enter（The configuration of CRLF processing decide how it express ）	Ctrl+J
11	0B	Caps Lock	Ctrl+K
12	0C	Print Screen	Ctrl+L
13	0D	Enter （ The configuration of CRLF processing decide how it express ）	Enter
14	0E	Scroll Lock	Ctrl+N
15	0F	Pause/Break	Ctrl+O
16	10	F11	Ctrl+P
17	11	Direction key ↑	Ctrl+Q
18	12	Direction key ↓	Ctrl+R
19	13	Direction key ←	Ctrl+S
20	14	Direction key →	Ctrl+T
21	15	F12	Ctrl+U
22	16	F1	Ctrl+V
23	17	F2	Ctrl+W
24	18	F3	Ctrl+X
25	19	F4	Ctrl+Y
26	1A	F5	Ctrl+Z
27	1B	F6	ESC
28	1C	F7	Ctrl+\
29	1D	F8	Ctrl+]
30	1E	F9	Ctrl+^
31	1F	F10	Ctrl+_

Appendix 5 operational character（serial port and USB-VCOM）

decimal	hexadecimal	character
0	00	NUL
1	01	SOH
2	02	STX
3	03	ETX
4	04	EOT
5	05	ENQ
6	06	ACK
7	07	BEL
8	08	BS
9	09	HT
10	0A	LF
11	0B	VT
12	0C	FF
13	0D	CR
14	0E	SO
15	0F	SI
16	10	DLE
17	11	DC1
18	12	DC2
19	13	DC3
20	14	DC4
21	15	NAK
22	16	SYN
23	17	ETB
24	18	CAN
25	19	EM
26	1A	SUB
27	1B	ESC
28	1C	FS
29	1D	GS
30	1E	RS
31	1F	US

configuration instruction and example

Example for user-defined prefix and suffix:
You can edit 10 characters as prefix or suffix. (In order to make sure the prefix and suffix can output normally, please enable user-defined prefix or suffix first)
Example 1.1： Add XYZ to all type of barcode as prefix.
Look up appendix 2, you can find that the HEX value for all codes is “99”. Look up appendix 3, the HEX value for XYZ is “58,59,5A”. First scan “user-defined prefix” in 2.11 edit, then the scanner will have two sounds like “D…D…”, then scan 9，9，5，8，5，9，5，A，and save, the setting accomplished.

If you want to change the prefix or suffix you set before you save the setting, you can scan “cancel the data read last time” or “Cancel all data read before” to reset. If you want to give up setting scan “Cancel current setting”.

Example 1.2： Add Q to QR code as prefix.
Look up appendix 2, you can find that the HEX value for QR code is “73”. Look up appendix 3, the HEX value for Q is “51”. First scan “user-defined prefix” in 2.11 edit, then the scanner will have two sounds like “D…D…”, then scan 7，3，5，1，and save, the setting accomplished.

Example 1.3： Cancel user-defined prefix in QR code
When you edit user-defined prefix and suffix, it will cancel the prefix and suffix you set if you scan “user-defined prefix” or “user-defined suffix” and add no character and save.
For example, cancel user-defined prefix in QR code, first scan “user-defined prefix”, then scan 7,3, and save. The prefix in QR code has been canceled.
Note: If there is a prefix for all type of barcode, after you done the operation above, the QR code will have the prefix you set for all type barcode.
If you need to cancel all prefix or suffix for all type of barcode, please scan “clear all user-defined prefix” and “clear all user-defined suffix”

USB update speed setting example
If the PC is weak properties, it is easy to have error of transmission and you need to set USB keyboard update speed to low speed, like 50ms (user-defined speed)
First, scan “User-defined update speed” then scan 5,0 in appendix 1 and save.

Guangzhou Yoko Electron Co.,Ltd

Address：No.4 Changrong Road,Huangpu District,Guangzhou,

Guangdong Province,China

TEL：020-8206 5617

FAX：020-82065420

http://www.chinayoko.com/

